

40001除湿机中英文说明书    尺寸：148\*210mm   比例1：1  
黑白两面印刷

Dehumidifier  
User Manual

Important Instructions:

This device is designed to remove excess moisture from small rooms such as studies, walk-in closets, and bathrooms. It is not intended to be disassembled or serviced by the user, except for the removable water tank. Using the device for any other purpose than described above may result in product damage and create additional risks.

Please follow the instructions carefully to ensure the safe and effective operation of the device.

Specifications

Item:	40001
Dehumidification:	Approx 220±15%ml per day at 30°C, 80% RH
Water tank capacity:	1L
Cooling element :	Peltier module
Input:	9V, 2.5A
Power:	22.5W
Water level detector:	Automatic switch off when water tank is full, the red indicator light is on,the noise beep 3 ,LED show E1.
Size:	140mm (L) *113mm (W) *219mm (H)
Working environment:	Over 15°C, over 40%RH

Box Contents

1 ×Dehumidifier  
1 × Power adapter  
1× Bilingual (Chinese & English) User Manual

Components

LED screen

Function panel

Adapter

Floater switch

Water displacement hole

Air outlet

Air inlet

Power connection hole

Water tank

Operation

ON/OFF

1st press: turn on dehumidifier and unit works at low mode

2nd press: turn off unit

HUMIDITY

Press the first time, the display will display the current ambient humidity value %; (the default humidity setting value is 40% RH when starting up)

Next, press the set humidity value to increase by 5% (from 40%-70%). After the set humidity value is displayed for 3 seconds, it will switch to display the current ambient humidity value, and cycle in turn...;

TIMER

1st press: set timer 6H, LED screen show 6H

2nd press: set timer 12H, LED screen show 12H

3rd press: set timer 24H,LED screen show 24H

4th press: turn off timer

LEVEL

1st press:Turn on Low gear, and the "Low" icon on the display will light up;

2nd press: Turn on High gear, and the "High" icon on the display will light up;

3rd press:Turn on Sleep mode, the machine at a low wind speed, the display screen will light up except for the moon icon, and the other lights will be off';

4th press: recycle above

LIGHT

1st press: Turn on the 7-color gradient light;

2nd press: Fix LED light color;

(Hold the button 3s to turn off LED light.)

Safety Instructions

If do not follow these operating instructions, any damage that occurs will not be covered by the manufacturer's warranty.

- When using the unit, please ensure that it is in an upright position.
- Do not attempt to open the unit and risk electric shock.
- Always remember to turn off the device when it is not in use.
- Do not use the power adapter in excessively wet areas to prevent electrical hazards.
- Do not block the air inlet on the back and the air outlet on the top to ensure smooth air flow
- When handling the unit, use both hands to avoid tilting and potential damage. For safety reasons, please keep the device out of the reach of children.

Cleaning and Maintain

Before cleaning the machine, make sure to turn off the power and unplug it from the outlet to ensure safety.

- To clean the water tank, empty it and use warm water with a small amount of mild detergent. Rinse it thoroughly and allow it to dry completely.
- To clean the machine's body, use a soft cloth to wipe off any dust or dirt. Do not rinse it with water directly as this may cause a power failure.
- Regularly clean the air outlet and air inlet of the machine to prevent dust or other impurities from clogging and affecting the air circulation.
- If the machine will not be used for an extended period of time, store it in a dry and well-ventilated area to prevent damage.

- 1 -

- 2 -

- 3 -

- 4 -